


## MORTUARY CHAMBER 1 BODY SIDE LOADING

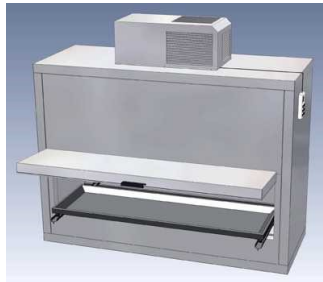

### Characteristics

<b>Temperature Range</b>	+2 / +10 °C
<b>Capacity</b>	1 body
<b>External Dimensions (W x D x H)</b>	cm 226 x 86 X 204 <i>External dimensions without monoblock unit: cm 226 x 86 X 166</i>
<b>Structure and Insulation</b>	White coated steel inside and outside; insulation polyurethane thickness 80 mm
<b>Door</b>	n.1 door with side opening
<b>Key Lock</b>	
<b>Light</b>	
<b>Internal equipment</b>	n.1 steel body tray
<b>Controller</b>	Digital electronic thermostat
<b>Alarms</b>	Acoustic and Visual for temperature deviations and failures.
<b>Refrigeration Type</b>	Ventilated
<b>Defrost</b>	Automatic with automatic evaporation of the condensate water

### Technical data

<b>Details</b>	<ul style="list-style-type: none"> <li>• Refrigerant type: R452A, CFC free</li> <li>• Mains Voltage 220V/1/50Hz</li> <li>• HP 5/8 E</li> <li>• Ambient Temperature: +10/+38 °C; Humidity 60%</li> <li>• Connector: Schuko</li> </ul>
<b>In accordance with</b>	2006/42/CE, 2014/30/CE, 2014/35/CE and following modifications
<b>Package</b>	Chamber to be installed on site, packed in cellophane on pallet, monoblock in strong cardboard on wooden pallet

### Accessories

Internal covering in stainless steel

External covering in stainless steel

#### DMLP UNIT

*External module with DMLP DIGITAL MONITOR: Monitor/alarm/recording system with rechargeable battery*  
*- Temperatures and alarms recorder on removable Secure Digital (SD Back-Up memory): it can store 5 years data, recording temperature and alarms every minute. The SD card can be connected to any PC: a software (Capture) is included, so that you can download, save and print all data from your PC*  
*- Battery backup: ensures alarms and recording of temperatures even in case of power failure. The battery system lasts about 12 hours.*  
*- Dry contact for remote connection + RS485 port*

#### DMLP PRINTER

Additional body tray

Hydraulic trolley side loading

Wooden crate Package

### FIOCCHETTI SCIENTIFIC S.R.L.

Via Panagulis, 48 - 42045 Luzzara (RE) Italy  
 Tel. +39 0522 976232- Fax +39 0522 976028  
 info@fiocchetti.it - www.fiocchetti.it  
 P.I.00934960352  
 Registro A.E.E. IT8020000002833