


MORTUARY CHAMBER 9 BODIES - 3 DOORS

Cod. CAM030903

Characteristics

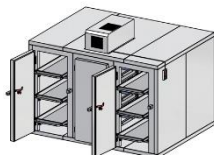

Disclaimer:
Images are purely
indicative. The features
and the accessories of the
products may differ
according to model and
application.

Temperature range	+2 / +8 °C available also with -10 -20 °C
Capacity	9 bodies on 3 levels cm 278,5 x 226 X 250 (TN version)
External Dimensions (WxDxH)	<i>BT version cm 278,5 x 226 x 254 Dimensions without monoblock: cm. 278,5 x 226 x 211; weight 1200 kg</i>
Structure and Insulation	White coated steel inside and outside; insulation polyurethane thickness 80 mm
Door	n.3 doors
Key Lock	
Light	
Internal equipment	n.9 steel body trays
Controller	Digital electronic thermostat
Alarms	Acoustic and Visual for temperature deviations and failures
Refrigeration Type	Ventilated
Defrost	Automatic with automatic evaporation of the condensate water

Technical data

Details	<ul style="list-style-type: none"> • Refrigerant type: R452A, CFC free • Mains Voltage 220V/1/50Hz (-20°C model: 380V/3/50Hz) • HP 1,2 E ;kW 0,7 (-20°C model: HP 3 E; kW 2,2) • Refrigerating capacity: 2245 W (-20°C model: 2456 W) • Ambient Temperature: +10/+32 °C; Humidity 60% • Connector: Schuko
In accordance with	2006/42/CE, 2014/30/CE, 2014/35/CE and following modifications
Package	Chamber to be installed on site, packed in cellophane on pallet, monoblock in strong cardboard on wooden pallet
Note	Available also with a negative temperature range (-10° and -20°C)

Internal covering in stainless steel

External covering in stainless steel

Small hatches, instead of the big door

DMLP UNIT

External module with DMLP DIGITAL MONITOR:
Monitor/alarm/recording system with rechargeable battery
- Temperatures and alarms recorder on removable Secure Digital (SD Back-Up memory): it can store 5 years data, recording temperature and alarms every minute.

The SD card can be connected to any PC: a software (Capture) is included, so that you can download, save and print all data from your PC
- Battery backup: ensures alarms and recording of temperatures even in case of power failure. The battery system lasts about 12 hours.
- Dry contact for remote connection + RS485 port

DMLP PRINTER

Additional body tray

Hydraulic trolley cm 32-165

Hydraulic trolley with 12V electrical adjustment cm 32-165

Cover for hydraulic trolley

60 Hz Frequency

FIOCCHETTI SCIENTIFIC S.R.L.

Headquarter: Via Panagulis, 48 - 42045 Luzzara (RE) Italy
VAT No. IT00934960352

Phone +39 0522 976232 - Fax +39 0522 976028

www.fiocchetti.com - Email: info@fiocchetti.it - Pec: fiocchetti@pec.it