


## MORTUARY CHAMBER 12 BODIES - 12 hatches

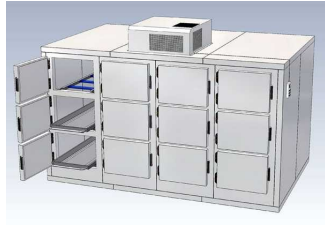

### Characteristics

<b>Temperature Range</b>	+2 / +8 °C <i>available also with -10 / -20 °C</i>
<b>Capacity</b>	12 bodies on 3 levels
<b>External Dimensions (W x D x H)</b>	cm 366 x 226 x 265 (TN version)  <i>BT version 366 x 226 x 280 External dimensions without monoblock unit: cm. 366 x 226 x 226</i>
<b>Structure and Insulation</b>	White coated steel inside and outside; insulation polyurethane thickness 80 mm
<b>Door</b>	N.12 hatches (dim. cm. 68 x 50)
<b>Key Lock</b>	
<b>Light</b>	
<b>Internal equipment</b>	n.12 steel body trays
<b>Controller</b>	Digital electronic thermostat
<b>Alarms</b>	Acoustic and Visual for temperature deviations and failures
<b>Refrigeration Type</b>	Ventilated
<b>Defrost</b>	Automatic with automatic evaporation of the condensate water

### Technical data

<b>Details</b>	- Refrigerant type: R452A, CFC free - Mains Voltage 380V/3/50Hz - HP 2,3 (-20°C model: 380/3/50Hz - HP 3,5) - Ambient Temperature: +10/+38 °C; Humidity 60% - Connector: Schuko
<b>In accordance with</b>	2006/42/CE, 2014/30/CE, 2014/35/CE and following modifications
<b>Package</b>	Chamber to be installed on site, packed in cellophane on pallet, monoblock in strong cardboard on wooden pallet
<b>note</b>	Available also with a negative temperature range (-10° and -20°C)

### Accessories

Internal covering in stainless steel

External covering in stainless steel

DMLP UNIT

*External module with DMLP DIGITAL MONITOR: Monitor/alarm/recording system with rechargeable battery  
- Temperatures and alarms recorder on removable Secure Digital (SD Back-Up memory): it can store 5 years data, recording temperature and alarms every minute. The SD card can be connected to any PC: a software (Capture) is included, so that you can download, save and print all data from your PC  
- Battery backup: ensures alarms and recording of temperatures even in case of power failure. The battery system lasts about 12 hours.  
- Dry contact for remote connection + RS485 port*

DMLP PRINTER

Additional body tray

Hydraulic trolley cm 30 -165

Hydraulic trolley with 12V electrical adjustment cm 30 -165

Cover for hydraulic trolley

Wooden crate Package

### FIOCCHETTI SCIENTIFIC S.R.L.

Via Panagulis, 48 - 42045 Luzzara (RE) Italy  
Tel. +39 0522 976232- Fax +39 0522 976028  
info@fiocchetti.it - www.fiocchetti.it  
P.I.00934960352  
Registro A.E.E. IT8020000002833